

Audi A8

Current Flow Diagram


No. 63 / 1

Edition 08.1997

Cruise control system petrol engines

Model year 1998

Fuse box

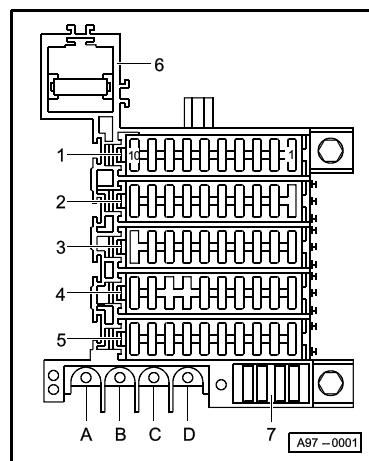

- 1 - Fuse carrier 1 (ST1), black
- 2 - Fuse carrier 1 (ST2), red
- 3 - Fuse carrier 1 (ST3), yellow
- 4 - Fuse carrier 1 (ST4), blue
- 5 - Fuse carrier 1 (ST5), brown
- 6 - Radiator fan fuse (S42)
- 7 - Spare fuses

A, B, C, Screwed junctions

D -

Fuse colours:


- 30 A - green
- 25 A - white
- 20 A - yellow
- 15 A - blue
- 10 A - red

5 A - beige

Audi A8

Current Flow Diagram

No. 63 / 2

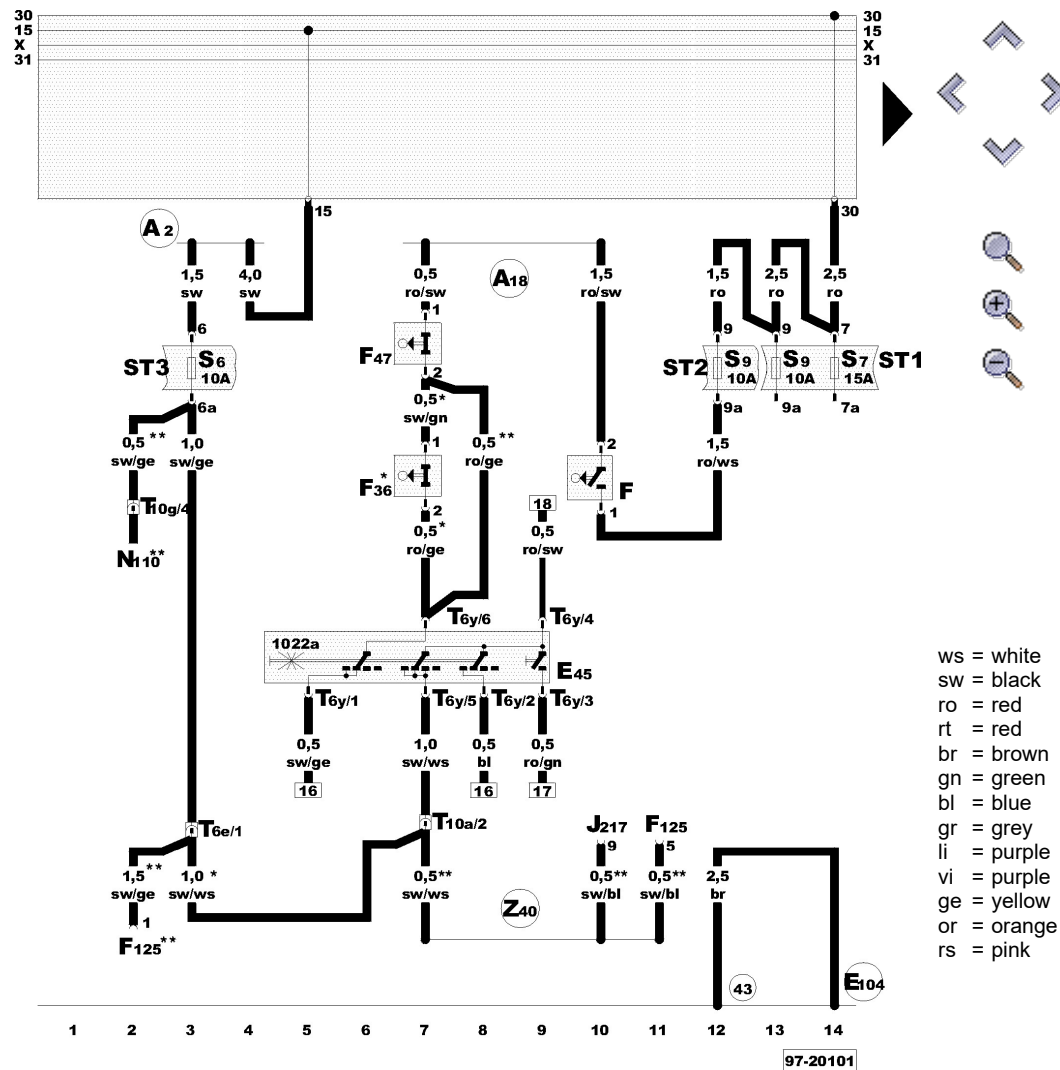

Cruise control system


- E45 - Cruise control system switch
- F - Brake light switch
- F36 - Clutch pedal switch
- F47 - Cruise control system brake pedal switch
- F125 - Multi-function switch
- J217 - Automatic gearbox control unit
- N110 - Selector lever lock solenoid
- S6 - Fuse in fuse carrier
- S7 - Fuse in fuse carrier
- S9 - Fuse in fuse carrier
- T6e - 6-pin connector, brown, connector point, electronics box, plenum chamber
- T6y - 6-pin connector, black, behind steering column switch trim
- T10a - 10-pin connector, black, connector point, electronics box, plenum chamber
- T10g - 10-pin connector, black, near selector lever console
- 43 - Earth point, lower part of right A-pillar
- A2 - Positive (+) connection (15), in dash panel wiring harness
- A18 - Connection (54), in dash panel wiring harness
- E104 - Earth connection, in dash panel wiring harness (near relay point)
- Z40 - Positive (+) connection (15), in cruise control system wiring harness
- * - Models with manual gearbox
- ** - Models with automatic gearbox

97-20101

Audi A8

Current Flow Diagram

No. 63 / 3

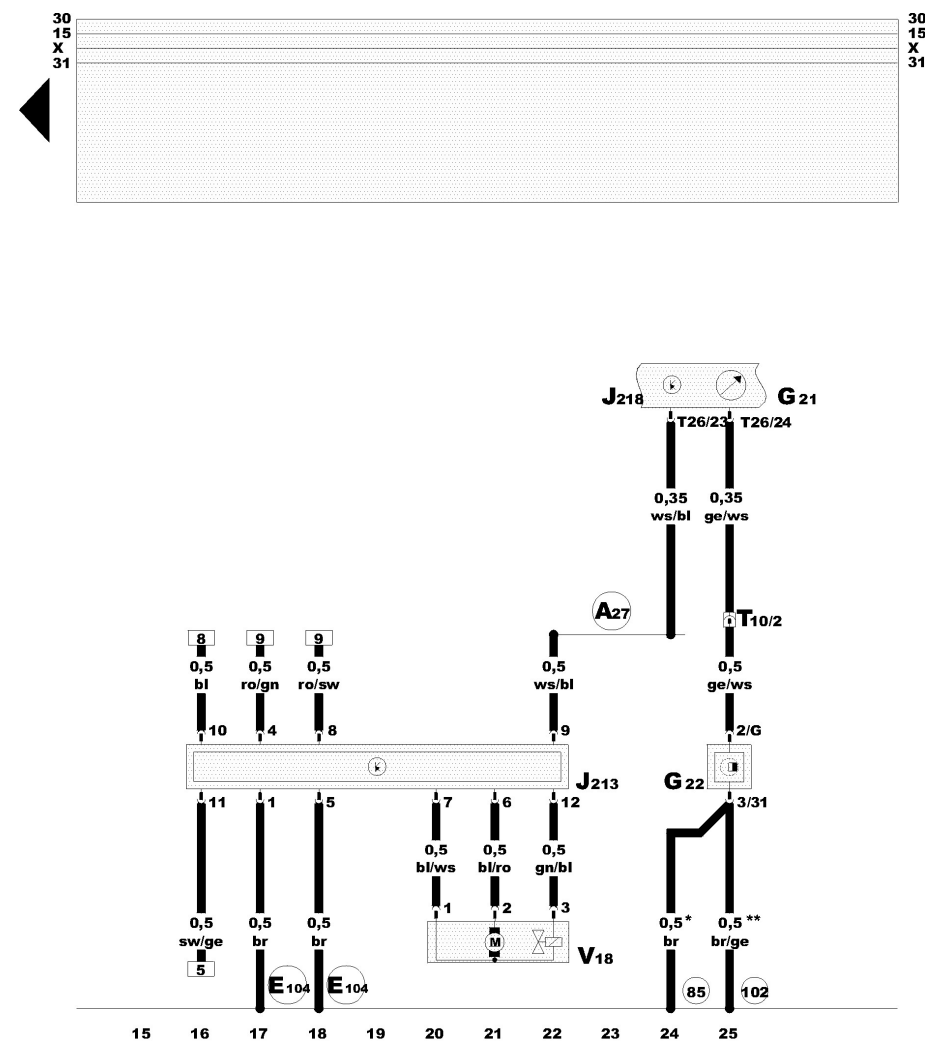

97-18423

Cruise control system

- G21 - Speedometer
- G22 - Speedometer sender
- J213 - Cruise control system control unit
- J218 - Combi-processor in dash panel insert
- T10 - 10-pin connector, blue, connector point, electronics box, plenum chamber
- T26 - 26-pin connector, red, on dash panel insert
- V18 - Vacuum pump for automatic speed control
- 85 - Earth connection -1-, in engine compartment wiring harness
- 102 - Earth connection, in gearbox wiring harness
- A27 - Connection (speed signal), in dash panel wiring harness
- E104 - Earth connection, in dash panel wiring harness (near relay point)
- * - Models with manual gearbox
- ** - Models with automatic gearbox

ws = white
 sw = black
 ro = red
 rt = red
 br = brown
 gn = green
 bl = blue
 gr = grey
 li = purple
 vi = purple
 ge = yellow
 or = orange
 rs = pink