

## Pin assignment at high-pressure sender -G65-

-Contact 1- Earth

-Contact 2- Signal output (square-wave signal to front operating and display unit, Climatronic control unit -J255-)

-Contact 3- Positive (terminal 75)



### Note

- ◆ The compressor is not switched on if the connector -B- is unplugged.
- ◆ The high-pressure sender -A- is an electronic control unit which generates a square-wave signal with a ratio which varies with the pressure in the refrigerant circuit → *Chapter*.
- ◆

