

Connector A Pin Assignments, Yellow 26-Pin

- 1 - Fuel level sensor signal
- 2 - Fuel level sensor Ground (GND)
- 3 - Door contact, driver's door
- 4 - Ignition key, terminal 86s
- 5 - Brake fluid level and hydraulic fluid level
- 6 - Seat belt switch
- 7 - Washer fluid level
- 8 - Parking light, right
- 9 - On board computer reset, left
- 10 - Board computer reset, right
- 11 - Board computer reset
- 12 - Temperature sensor Ground (GND)
- 13 - Temperature switch "On"
- 14 - Outside air temperature sensor/ AC system
- 15 - Open
- 16 - Audio signal "On"
- 17 - Engine coolant temperature sensor signal
- 18 - Engine coolant level warning
- 19 - Brake light
- 20 - Backup light/headlight
- 21 - Parking light, left
- 22 - Coolant fan third speed
- 23 - Light brightness sensor output
- 24 - Light brightness sensor
- 25 - Outside temperature sensor Ground (GND)
- 26 - A/C compressor "Off"

